



INDEX	PART	DESCRIPTION	INDEX	PART	DESCRIPTION
1	9245-9962-90	BARREL	25	9245-9964-40	EXHAUST DEFLECTOR
2	9245-9963-10	LOCK RING BUMPER	26	9245-9982-96	TRIGGER
3	9245-9963-30	PISTON	29	9245-9983-04	HANDLE BARE
4	9245-9963-50	VALVE PLATE	NS	9245-9983-03	HANDLE COMPLETE
5	9245-9963-60	BUMPER VALVE SEAT	34	9246-0208-36	RETAINER SPRING
8	9245-9963-70	VALVE DOWEL (2)	NS	9246-0203-71	SWIVEL (7/8 - 24, 1/2" HOSE BARB)
12	9245-9982-97	THROTTLE VALVE BUSHING	41	9245-9965-50	FRONT VALVE SPACER HOUSING
13	9245-9982-99	THROTTLE VALVE O-RING	42	9245-9965-60	UPPER VALVE PLATE
14	9245-9982-98	THROTTLE VALVE	43	9245-9965-70	INTER-LOCK RING (2)
15	9245-9983-01	THROTTLE VALVE SPRING	44	9245-9965-80	BUSHING FOR ROUND SHANK (.680")
16	9245-9983-02	AIR INLET O-RING	44	9245-9965-90	BUSHING FOR HEX SHANK (.580")
17	9245-9983-00	AIR INLET BUSHING	28	9247-9853-50	OVAL COLLAR RETAINER
18B	9245-9964-20	LEVER FULCRUM PIN	31	9245-9971-00	HANDLE LOCK RING

SERVICE NOTE: When re-assembling this tool following any cleaning or service procedure, the two piece INTER LOCK RINGS (PN: 6143) must be replaced inside handle or handle will not lock in the tightened position and may vibrate loose when operating the tool (a small amount of thread locking compound may also be applied to barrel threads before the handle LOCK RING PN: 6131 is tightened in place.)