



INDEX	PART	DESCRIPTION	INDEX	PART	DESCRIPTION
1	9245-9990-33	BARREL	25	9245-9964-40	EXHAUST DEFLECTOR
2	9245-9963-10	LOCK RING BUMPER	26	9245-9982-96	TRIGGER
3	9245-9990-34	PISTON	29	9245-9990-40	HANDLE BARE
4	9245-9990-35	VALVE RING	NS	9245-9990-41	HANDLE COMPLETE
5	9245-9990-36	VALVE COVER	34	9246-0208-36	RETAINER SPRING
6	9245-9990-37	VALVE SEAT	NS	9245-9965-10	SWIVEL(7/8 - 24, 1/2" HOSE BARB)
7	9245-9990-38	VALVE GUIDE	41	9245-9965-50	FRONT VALVE SPACER HOUSING
8	9245-9990-39	VALVE DOWEL (2)	42	9245-9965-60	UPPER VALVE PLATE
12	9245-9982-97	THROTTLE VALVE BUSHING	43	9245-9990-42	INTER-LOCK RING (2)
13	9245-9982-99	THROTTLE VALVE O-RING	44	9245-9965-80	BUSHING FOR ROUND SHANK (.680")
14	9245-9982-98	THROTTLE VALVE	44	9245-9965-90	BUSHING FOR HEX SHANK (.580")
15	9245-9983-01	THROTTLE VALVE SPRING	28	9247-9853-50	OVAL COLLAR RETAINER
16	9245-9983-02	AIR INLET O-RING	31	9245-9971-00	HANDLE LOCK RING
17	9245-9983-00	AIR INLET BUSHING			
18B	9245-9964-20	LEVER FULCRUM PIN			

SERVICE NOTE: When re-assembling this tool following any cleaning or service procedure, the two piece INTER LOCK RINGS (PN: 6143) must be replaced inside handle or handle will not lock in the tightened position and may vibrate loose when operating the tool (a small amount of thread locking compound may also be applied to barrel threads before the handle LOCK RING PN: 6131 is tightened in place.)