

PAVING BREAKER

SYM. NO.	PART NO.	CONTINENTAL NO.	DESCRIPTION	AMT. REQ.
1	PB90-01	6001	Cylinder	1
2	PB90-02	6602	Cylinder Plug	5
3	PB90-03	6003	Piston Hammer	1
4	PB90-04	6604	Automatic Valve	1
5	PB90-05	6005	Valve Chest	1
6	PB90-06	6006	Valve Seat	1
7	PB90-07	6007	Valve Guide	1
8	PB90-08	6608	Valve Chest Dowel Pin	1
9	PB90-09	6609	Plunger	1
10	PB90-10	6610	Plunger Spring	1
11	PB90-11	6011	Back Head (Bare)	1
12	PB90-12	6612	O-Ring	1
13	PB90-13	6613	Rubber Grip	2
14	PB90-14	6614	Throttle Valve	1
15	PB90-15	6615	Throttle Valve Stem Guide	1
16	PB90-16	6616	Throttle Valve Spring	1
17	PB90-17	6617	Throttle Lever	1
18	PB90-18	6618	Throttle Lever Pin	2
19	PB90-19	6019	Oil Plug	1
20	PB90-20	6620	Oil Control Plug	1
21	PB90-21	6021	Front Head	1
23	PB90-23	6023	Back Head Bolt	4
24	PB90-24	6624	Lock Washer	4
25	PB90-25	6625	Back Head Bolt Nut	4
26	PB90-26	6026	Tappet Seat	1
27	PB90-27	6027	Tappet	1
28	PB90-28	6628	Steel Retainer	1
29	PB90-29	6629	Steel Retainer Bolt	1
30	PB90-30	6630	Steel Retainer Bolt Nut	1
31	PB90-31	6631	Lock Washer	1
32	PB90-32	6632-A	Steel Retainer Bolt Bushing	2
33	PB90-33	6633	Steel Retainer Plunger	1
34	PB90-34	6634	Steel Retainer Spring	1
35A	PB90-35	6035	Air Inlet Swivel	1
35B	PB90-35B	6050	Air Inlet O-Ring	1
36	PB90-36	6036	Air Inlet Swivel Nut	1
37	PB90-37	6037	Air Inlet Swivel O-Ring	1
38	PB90-38	6038	Air Inlet Screen	1
39	PB90-39	6039	Front Head Bolt	2
40	PB90-40	6640	Front Head Bolt Nut	2
41	PB90-41	6641	Front Head Bolt Lock Washer	2
42	PB90-42	6642	Front Head Bolt Spring	2
43	PB90-43A	6644-A	Front Head Bushing (1-1/8")	1
	PB90-43B	6644-B	Front Head Bushing (1-1/4")	(1)
45	PB90-45	6645	Felt Oiler	1
48	PB90-48	6048	Oil Tank Plug	1
50	PB90-50	6053	Spring Pin	1
51	PB90-51	6054	Stop Lever	1
52	PB90-52	6055	Stop Lever Spring	1
53	550091	6082	Muffler CP.	(1)

