




**Chicago
Pneumatic**

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-5144 Toll Free: (888) 883-5144 www.crowdersupply.com

Spare parts list


Petrol breakers

CP Red Hawk

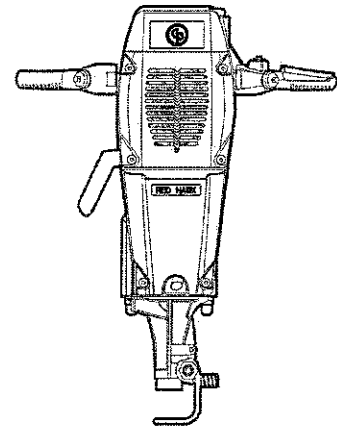

Spare parts list


Top cover, front cover and back cover

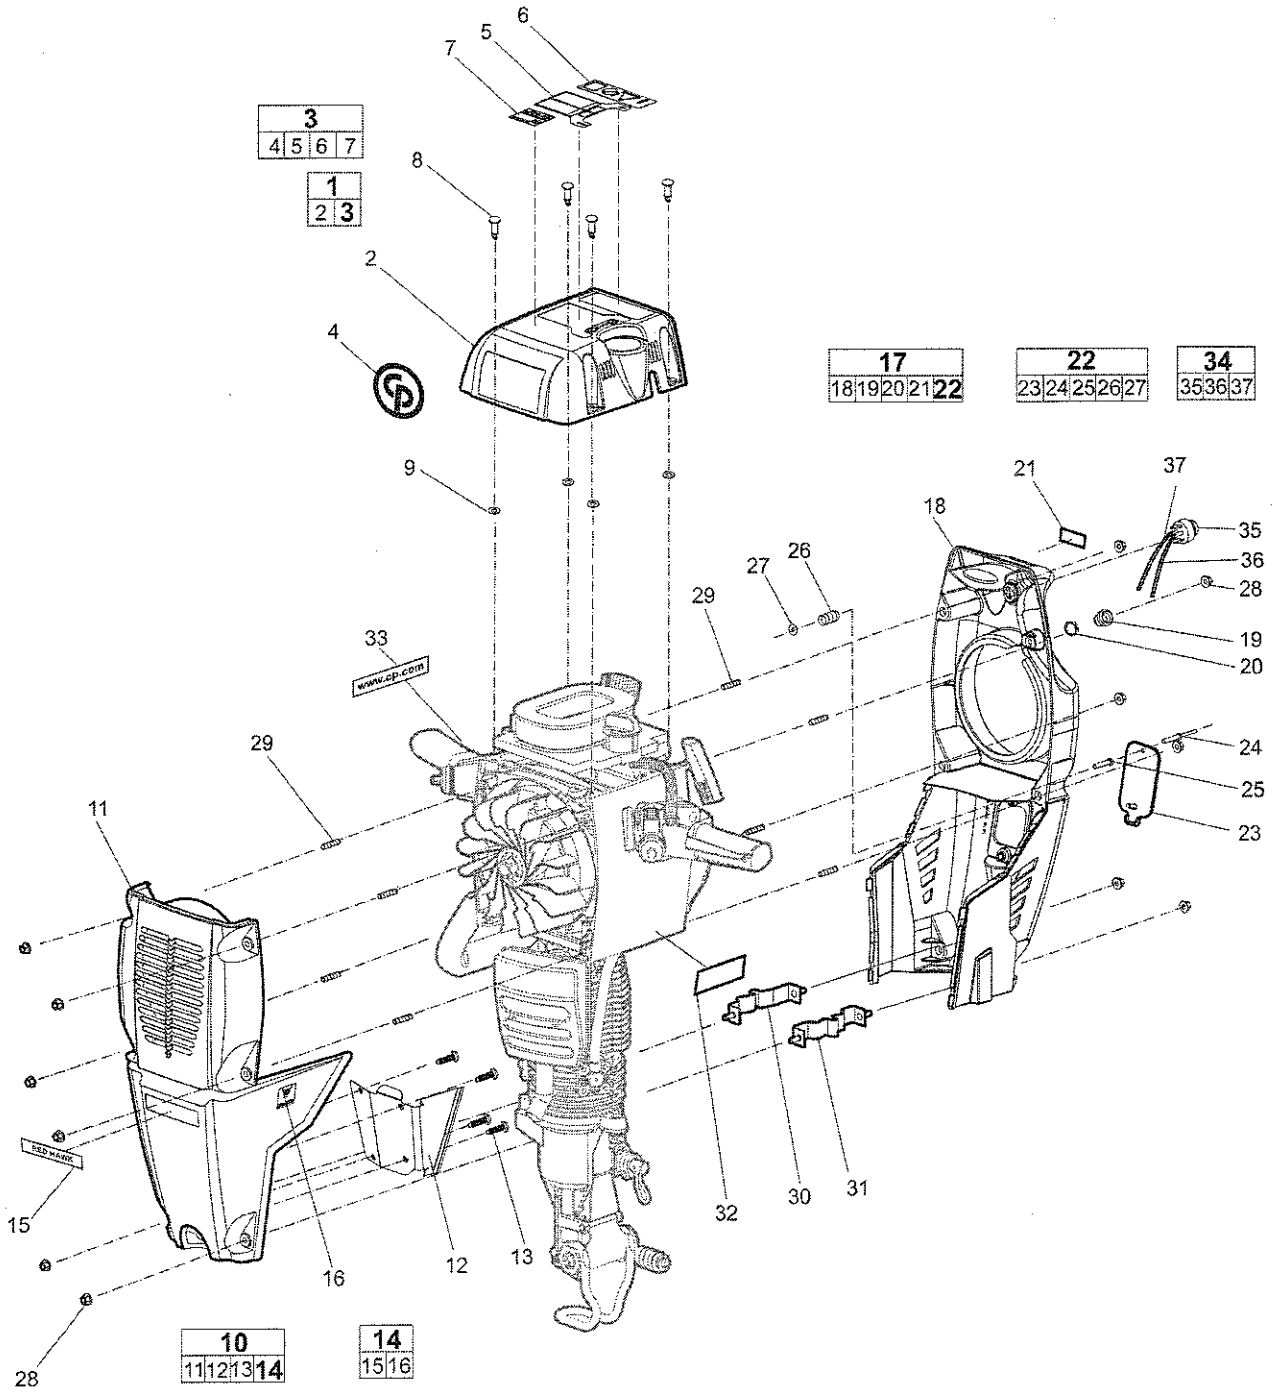

Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2,3)	Top cover, complete		1	9234 0015 25
2	Top cover		1	
3(4-7)	Label, complete		1	9234 0015 26
4	Product label	"CP"	1	9234 0011 19
5	Start instruction label		1	9234 0015 04
6	Safety label		1	9234 0011 30
7	Warning label		1	9234 0009 23
8	Stud fastner		4	9234 0014 99
9	Holder		4	9234 0015 01
10(11-13,14)	Front cover, complete		1	9234 0011 12
11	Front cover		1	-
12	Heat shield		1	9234 0014 10
13	Tapping screw		4	0226 3300 19
14(15-16)	Label, complete		1	9234 0015 27
15	Product label	"RED HAWK"	1	9234 0011 08
16	Electronic distance label		1	9232 2216 80
17(18-21,22)	Back cover, complete		1	9234 0015 02
18	Back cover		1	-
19	Rope guide		1	9232 0905 30
20	Circlip		1	0335 1117 00
21	Label		1	9234 0009 09
22(23-27)	Hatch cover, complete		1	9234 0009 14
23	Hatch cover		1	-
24	Popnit		1	9232 0802 40
25	Rivet		1	9232 0802 30
26	Spring		1	9232 0406 30
27	Washer		1	9232 0309 80
28	Nut	M6	12	9232 0207 50
29	Stud		8	9232 0116 60
30	Bracket		1	9234 0007 81
31	Bracket		1	9234 0007 79
32	Label	"EPA"	1	9234 0011 15
33	Label	"www.cp.com"	1	9234 0011 28
34(35-37)	Prime pump, complete		1	9234 0014 18
35	Prime pump		1	9232 2312 10
36	Tube		1	9234 0014 27
37	Tube		1	9232 2314 40


Hammer piston and breaker housing

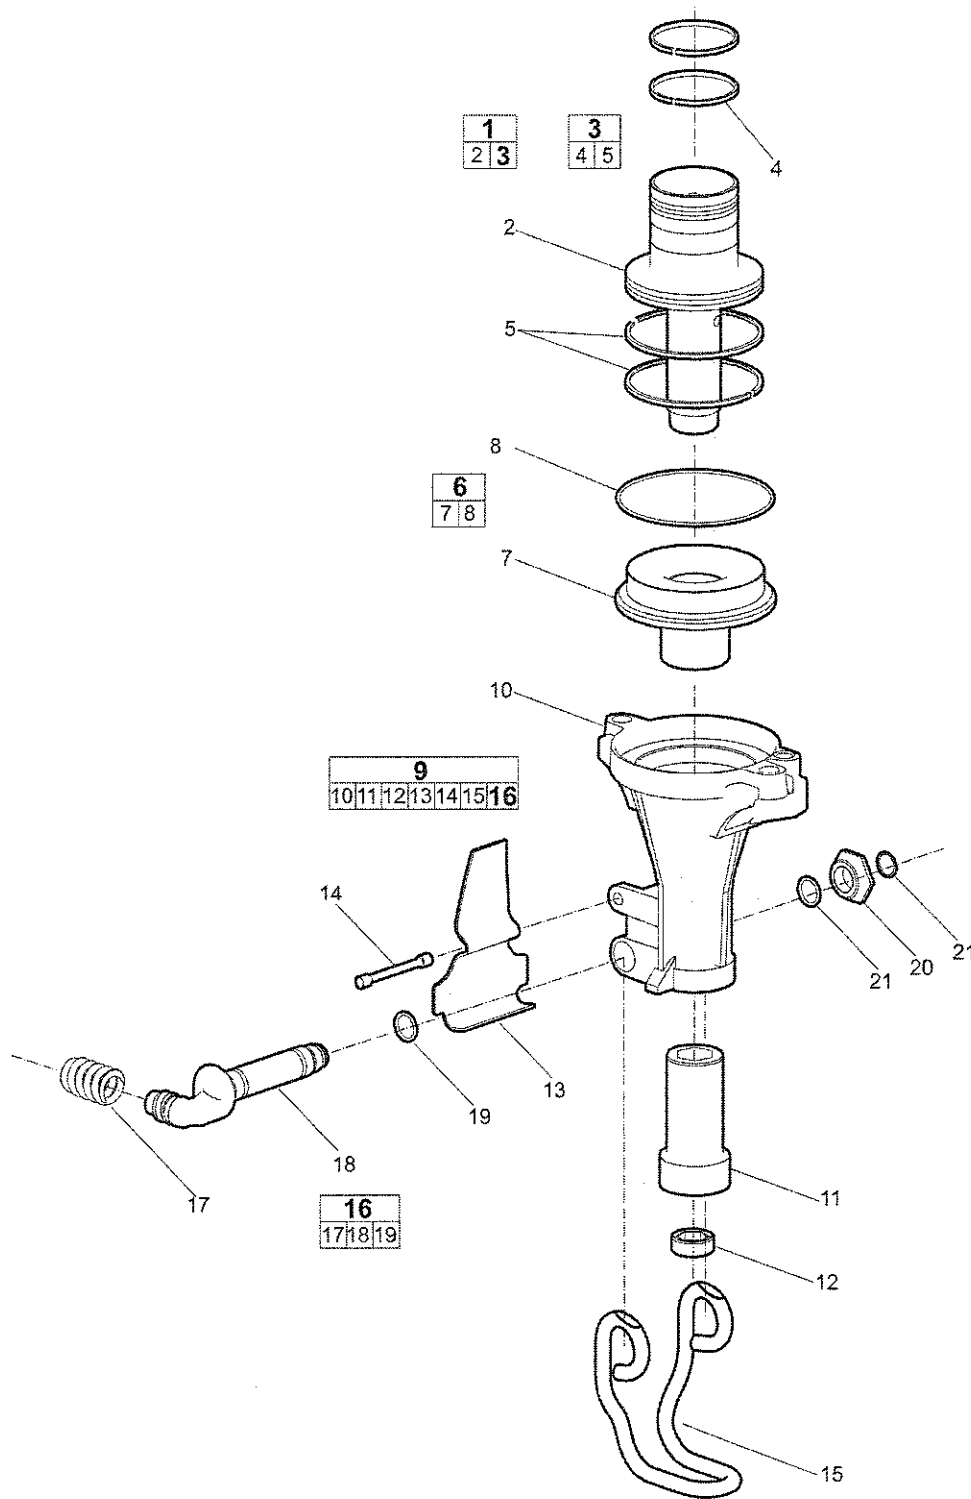

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2,3)	Breaking piston, complete		1	9234 0015 17
2	Breaking piston		1	-
3(4-5)	Piston ring, complete		1	9234 0015 16
4	Piston ring	58.00 x 3.15 mm 2.28 x 0.12 in.	2	9234 0014 15
5	Piston ring	90.0 x 1.57 mm 3.54 x 0.06 in.	2	9234 0014 16
6(7-8)	Piston guide, complete		1	9232 2106 41
7	Piston guide		1	-
8	O-ring	99.10 x 2.40 mm 3.90 x 0.09 in.	1	9232 1205 00
9(10-15,16)	Breaker housing, complete		1	9234 0011 34
10	Breaker housing		1	-
11	Inset socket		1	9234 0011 32
12	Seal	22 mm 0.87 in.	1	9232 1207 90
13	Yoke spring		1	9232 0402 80
14	Lock pin		1	9232 0601 90
15	Yoke		1	9232 1605 50
16(17-19)	Yoke bolt, complete		1	9232 1605 72
17	Spring		1	9232 0402 60
18	Yoke bolt		1	-
19	O-ring		2	9232 1201 80
20	Yoke nut		1	9232 1605 60
21	Lock ring		1	9232 0503 50


Cylinder

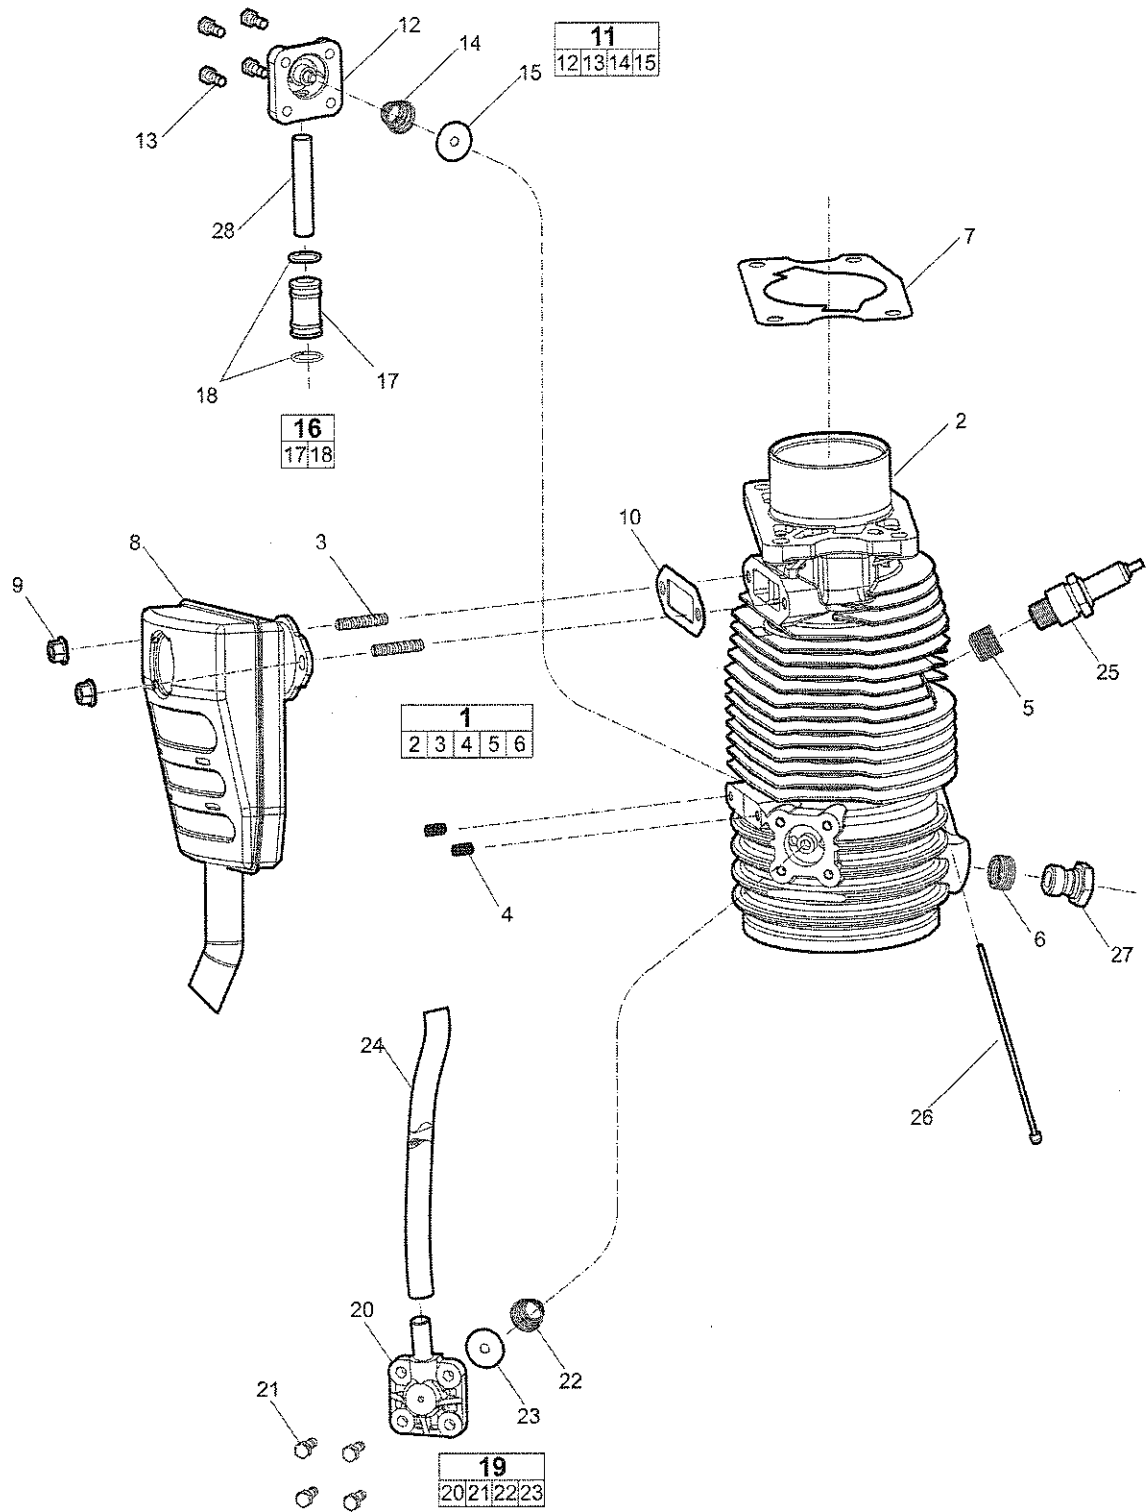

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2-6)	Cylinder, complete		1	9234 0010 32
2	Cylinder		1	-
3	Stud bolt	M6 x 25 mm	2	9232 0116 50
4	Thread insert	Helicol M5 x 0.8 x 10 mm	2	9232 1808 70
5	Thread insert	Helicol M14 x 1.25 x 12 mm	1	9232 1802 40
6	Thread insert	Helicol M16 x 1.25 x 8 mm	1	9232 1808 80
7	Gasket		1	9232 1202 50
8	Silencer		1	9334 0015 41
9	Nut	M6, DIN 6927	2	9232 0207 50
10	Gasket		1	9232 1214 20
11(12-15)	Valve body, complete		1	9232 1902 52
12	Valve body		1	-
13	Screw	M5 x 14 mm	4	9232 0116 40
14	Spring		1	9232 0401 90
15	Valve washer		1	9232 1900 40
16(17-18)	Rubber hose, complete		1	9232 1401 31
17	Rubber hose		1	-
18	Lock ring		2	9232 0503 50
19(20-23)	Valve body, complete		1	9232 1902 92
20	Valve body		1	-
21	Screw	M5 x 14 mm	4	9232 0116 40
22	Spring		1	9232 0401 90
23	Valve washer		1	9232 1900 40
24	Rubber hose		1	9232 1408 20
25	Spark plug	Bosch WR7AC	1	9234 0009 04
26	Cleaning needle		1	9232 1802 11
27	Gas duct valve		1	9232 1900 51
28	Tube		1	9232 1401 40


Crank case

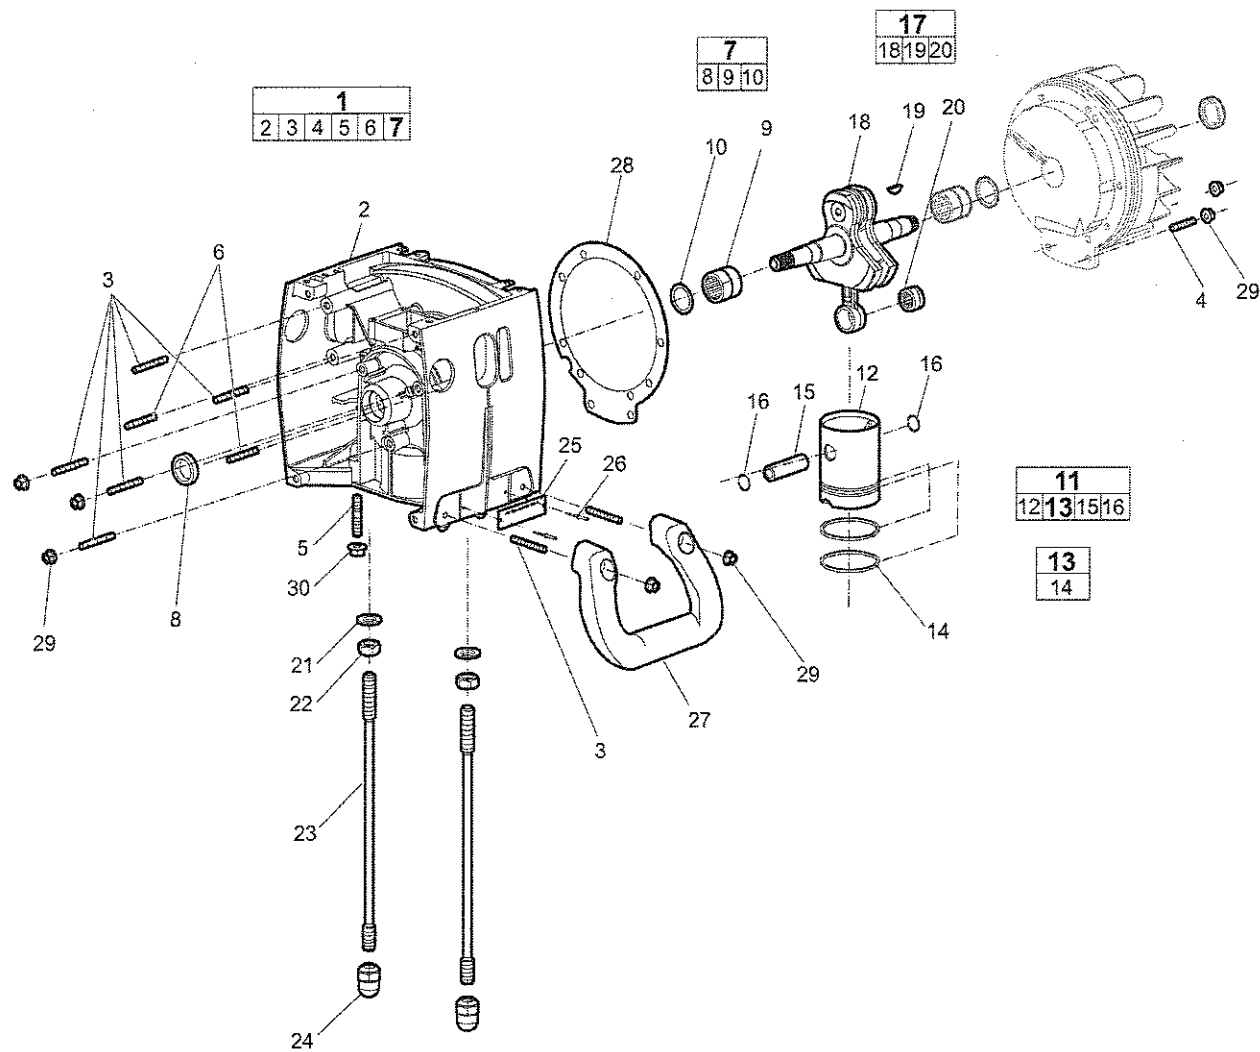

Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2-6,7)	Crank case, complete		1	9234 0015 51
2	Crank case		1	-
3	Stud		7	9232 0116 80
4	Stud		18	9232 0116 60
5	Stud		4	9232 0125 20
6	Stud		2	9232 0116 70
7(8-10)	Needle bearing, complete		1	9232 1003 02
8	Seal ring		1	9232 1200 70
9	Needle bearing		1	9232 1003 01
10	Spacer		1	-
11(12,13,15-16)	Engine piston, complete		1	9234 0014 11
12	Piston		1	-
13(14)	Piston ring, complete	Complete set of 2 piston rings.	1	9234 0015 54
14	Piston ring		2	-
15	Gudgeon pin		1	9232 2204 10
16	Lock ring		2	9232 0501 10
17(18-20)	Crank shaft, complete		1	9234 0014 90
18	Crank shaft		1	-
19	Key		1	9232 2214 20
20	Needle bearing		1	9232 1000 70
21	Spring washer		2	9232 0308 40
22	Nut	M12 x 1.5 mm	2	9232 0206 10
23	Draw bolt		2	9232 0111 60
24	Cap nut	M12 x 1.5 mm	2	9232 0206 00
25	Data plate		1	-
26	Rivet		2	-
27	Side handle		1	9234 0007 98
28	Gasket		1	9232 1202 60
29	Nut	M6	17	9232 0207 50
30	Nut	M8	4	9232 0208 00


Crank case cover

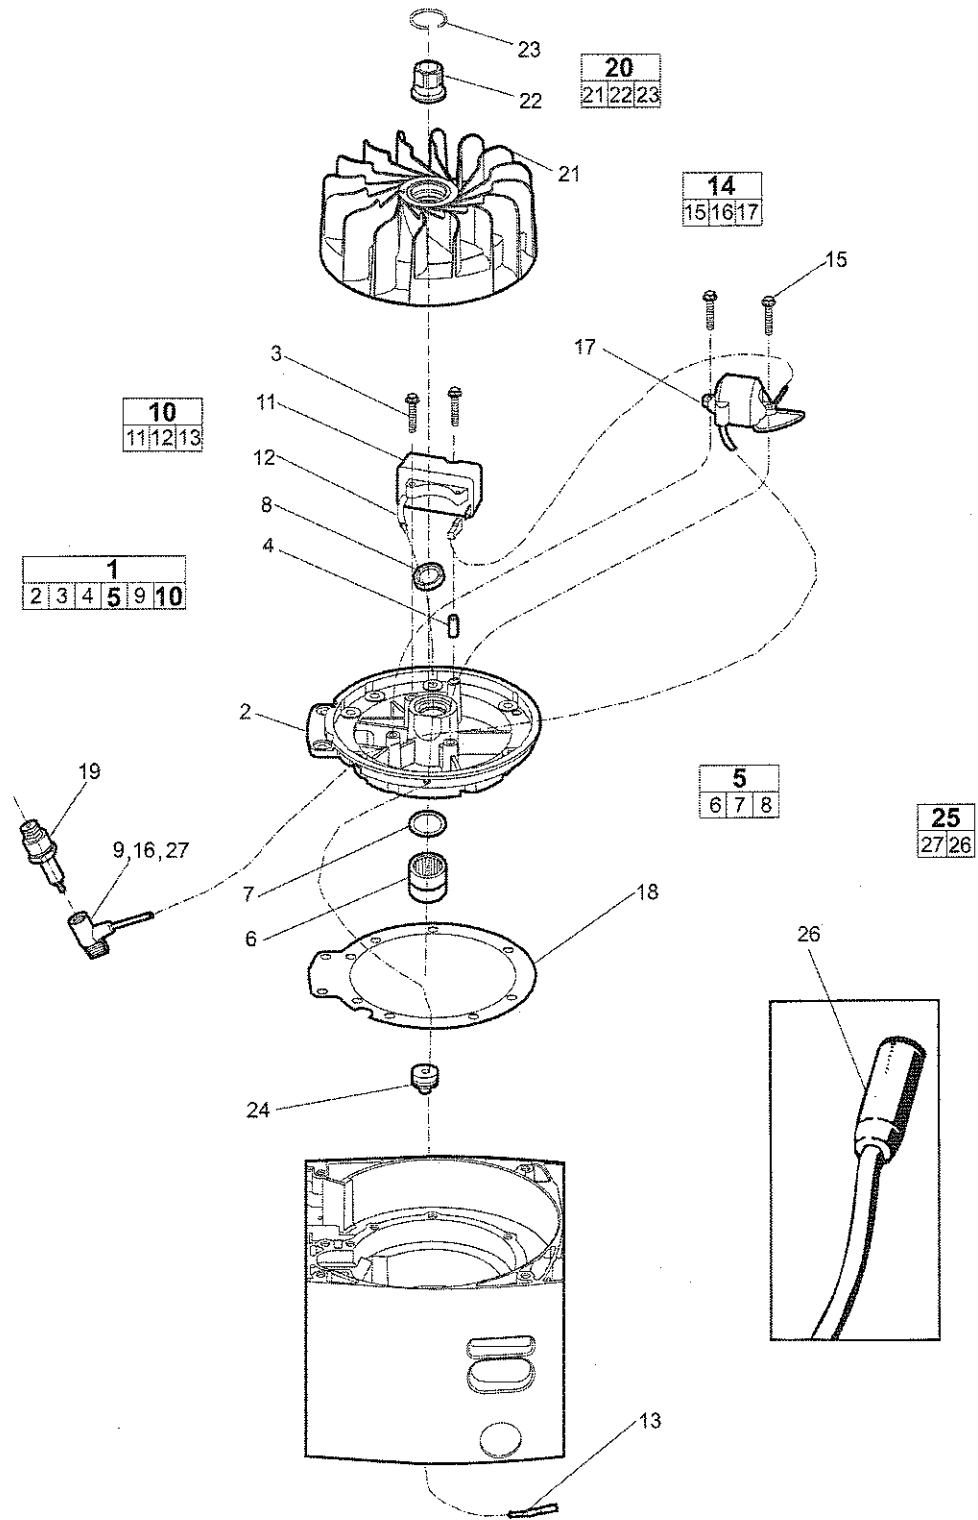

Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2-4,5,9,10)	Cover, complete		1	9234 0008 53
2	Cover		1	-
3	Screw	M5 x 28 mm	2	9232 0115 40
4	Bushing		1	9232 0903 40
5(6-8)	Needle bearing, complete		1	9232 1003 02
6	Needle bearing		1	-
7	Disk		1	-
8	Seal ring		1	9232 1200 70
9	Spark plug cap		1	-
10(11-13)	Electronic unit, complete		1	9234 0008 71
11	Electronic unit		1	-
12	Protection hose		1	9232 2304 60
13	Coupling sleeve		1	-
14(15-17)	Induction coil, complete		1	9232 2609 01
15	Screw	M5 x 28 mm	2	9232 0115 40
16	Spark plug cap		1	-
17	Induction coil		1	-
18	Gasket		1	9232 1202 60
19	Spark plug		1	9234 0009 04
20(21-23)	Flywheel, complete		1	9232 2213 51
21	Flywheel		1	-
22	Flywheel nut		1	9232 0208 10
23	Lock ring		1	9232 0504 20
24	Socket		1	9232 1214 90
25(26-27)	Ignition cable, complete		1	9234 0015 55
26	Ignition cable		1	-
27	Spark plug cap		1	-


Starter cover and fuel tank

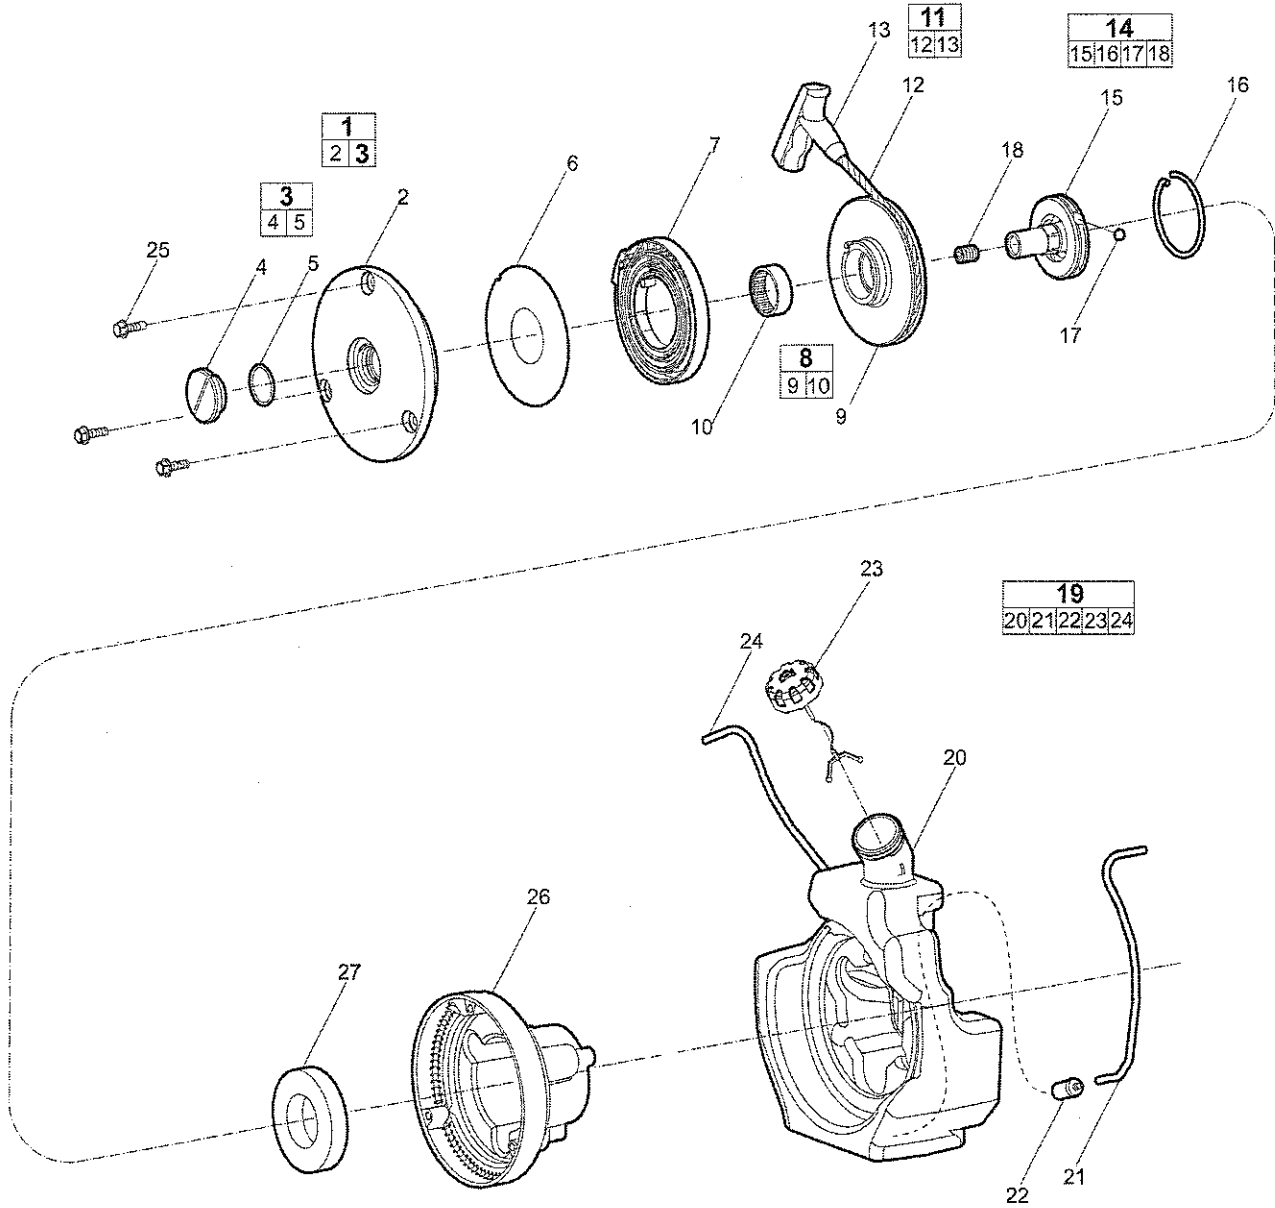

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2,3)	Starter cover, complete		1	9234 0008 42
2	Starter cover		1	-
3(4-5)	Screw cap, complete		1	9234 0008 52
4	Screw cap		1	-
5	O-ring		1	9232 1213 90
6	Wearing washer		1	9232 2406 40
7	Starter spring		1	9232 2407 71
8(9-10)	Starter pulley, complete		1	9232 2405 01
9	Starter pulley		1	-
10	Needle bearing		1	9232 1003 80
11(12-13)	Starter rope, complete		1	9234 0009 00
12	Starter rope		1	9232 2405 10
13	Starter handle		1	9234 0000 45
14(15-18)	One-way clutch, complete		1	9232 2401 01
15	One-way clutch		1	-
16	Snap ring		1	9232 0501 20
17	Ball		4	9232 1300 20
18	Stop screw	M12 x 16 mm	1	9232 0104 30
19(20-24)	Fuel tank, complete		1	9234 0014 30
20	Fuel tank		1	-
21	Fuel tube		1	-
22	Fuel filter		1	9234 0008 89
23	Fuel tank cap		1	9234 0015 19
24	Tube		1	9234 0014 28
25	Screw	M6 x 20 mm	3	9232 0115 30
26	Center tube		1	9232 2406 10
27	Retainer ring		1	9232 1202 90


Filter casset

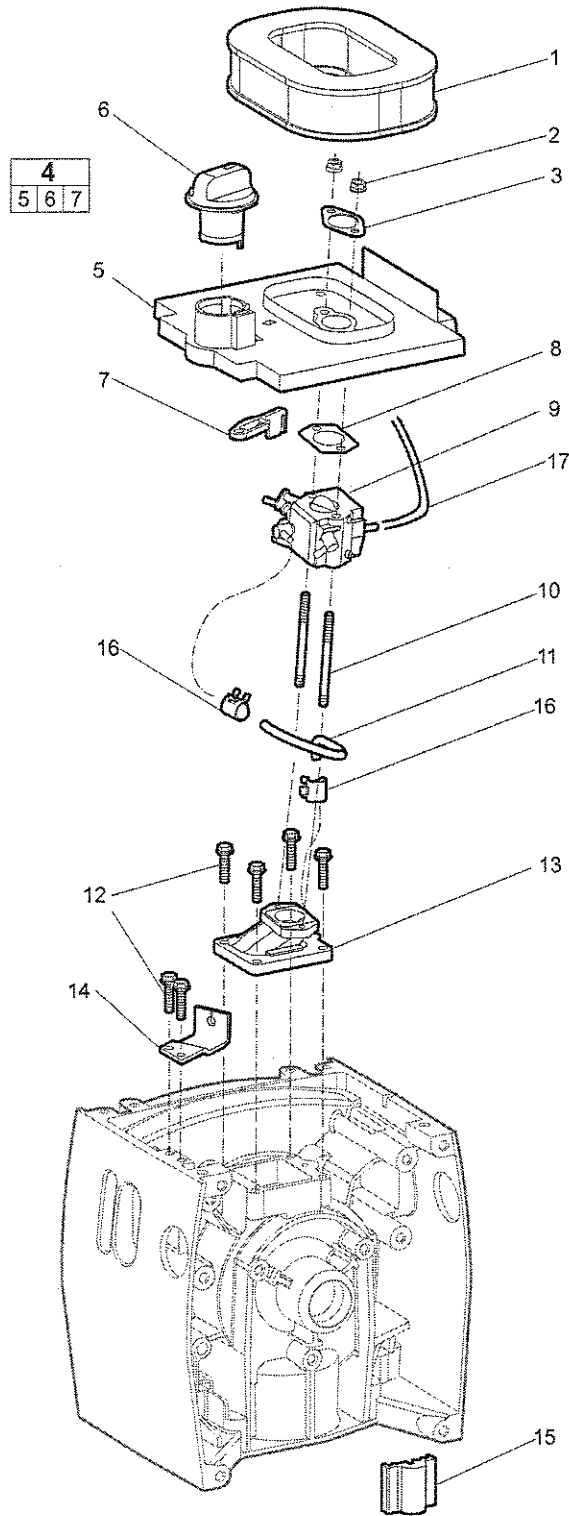

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1	Air filter		1	9234 0001 36
2	Nut	M5	2	9232 0208 80
3	Plate		1	9234 0000 63
4(5-7)	Filter cassette, complete		1	9234 0014 21
5	Filter cassette		1	-
6	Choke handle		1	9234 0014 91
7	Choke arm		1	9234 0010 30
8	Gasket		1	9234 0001 37
9	Carburettor		1	-
10	Stud		2	9234 0001 80
11	Hose		1	9234 0008 87
12	Screw	M5 x 20 mm	6	9232 0118 80
13	Reed valve		1	9234 0007 65
14	Wire attachment		1	9234 0008 04
15	Distans		1	9234 0009 17
16	Hose-clamp		2	9234 0009 21
17	Hose		1	9234 0014 03

Handle

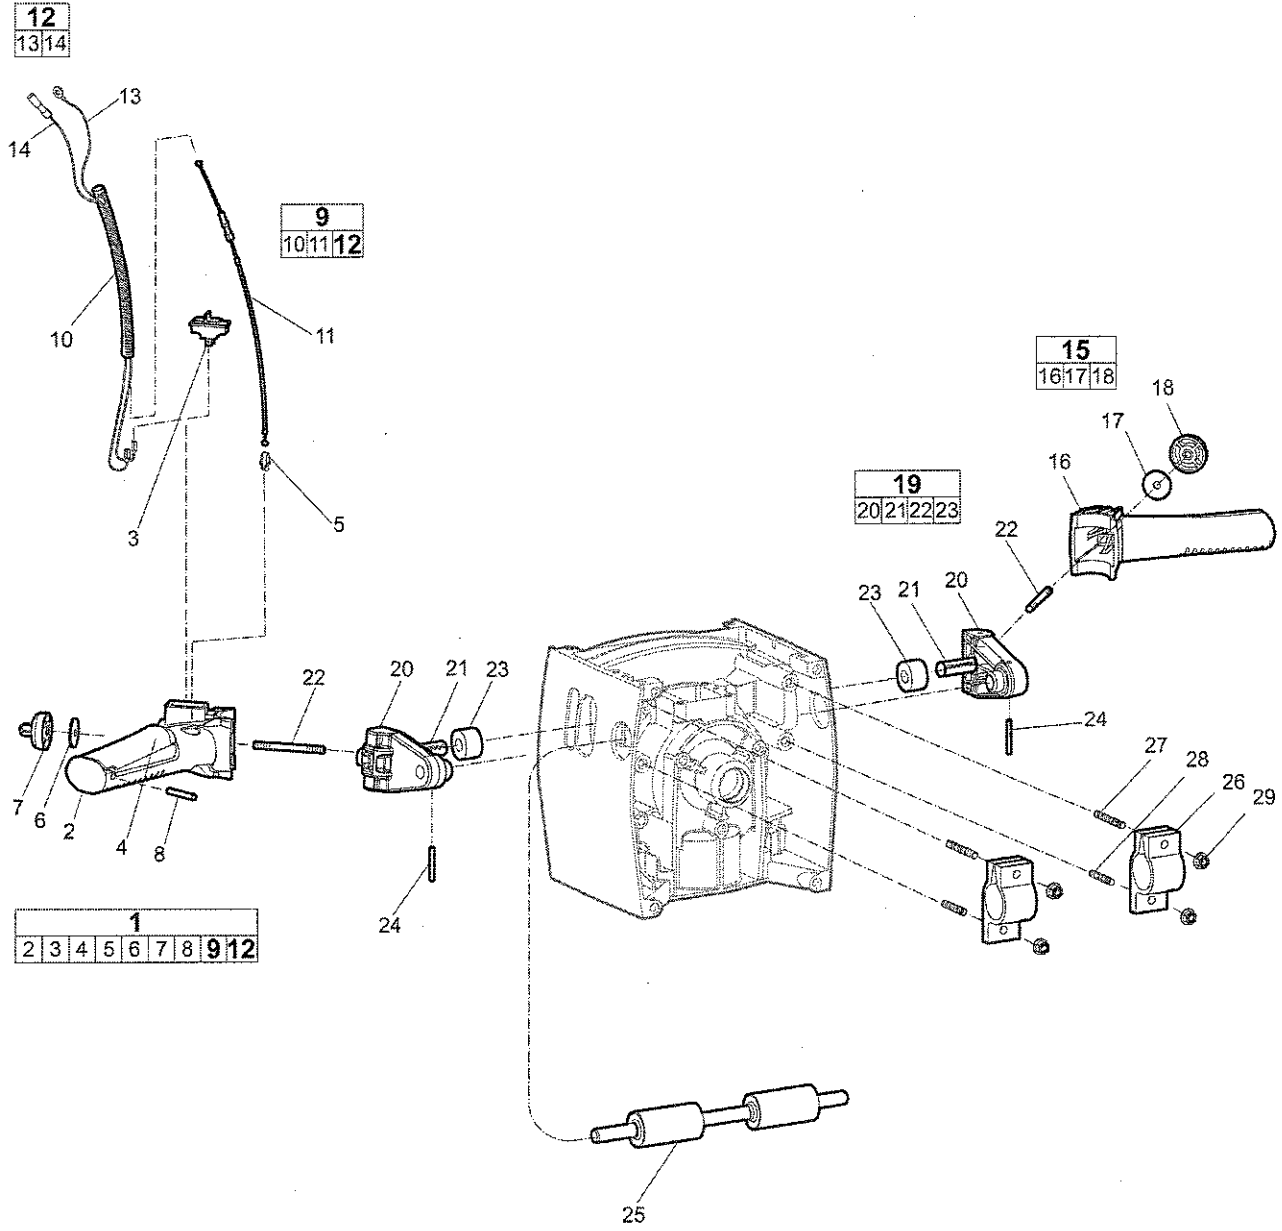

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

No.	Description	Remark	Quantity	Part number
1(2-8,9)	Handle left, complete		1	9234 0008 05
2	Handle		1	-
3	Stop switch		1	9234 0001 11
4	Throttle control		1	9234 0005 25
5	Nipple		1	9234 0004 90
6	Washer		1	9234 0005 84
7	Steering wheel		1	9234 0002 18
8	Parallel pin	CP 5 x 32 mm	1	9234 0005 65
9(10-11,12)	Tube cover, complete		1	9234 0008 95
10	Protection cover		1	-
11	Wire		1	-
12(13-14)	Protection, complete		1	9234 0008 95
13	Cable		1	-
14	Cable		1	-
15(16-18)	Handle right, complete		1	9234 0008 07
16	Handle		1	-
17	Washer		1	9234 0005 84
18	Steering wheel		1	9234 0002 18
19(20-23)	Handle bar, complete		1	9234 0014 78
20	Handle bar		1	-
21	Connex pin		1	-
22	Stud		1	9234 0010 40
23	Damper		1	9234 0009 10
24	Spring pin		2	9232 0606 60
25	Handle spring		1	9234 0007 61
26	Clamp		2	9234 0008 50
27	Stud	M6 x 45 mm	2	9232 0116 80
28	Stud	M6 x 35 mm	2	9232 0116 70
29	Nut	M6	4	9232 0207 50


Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

Tightening torque

Description	Tightening torque	Remark
M5 Screw	8 Nm	
M6 Screw	10 Nm	
M12 Stop screw	30 Nm	
M6 Nut	10 Nm	
M8 Nut	22 Nm	
M12 Nut and Cap nut	20 Nm	
Spark plug to cylinder	25 Nm	
Gas duct valve to cylinder	42 Nm	
Flywheel nut	60 Nm	

Accessories

Optional equipment

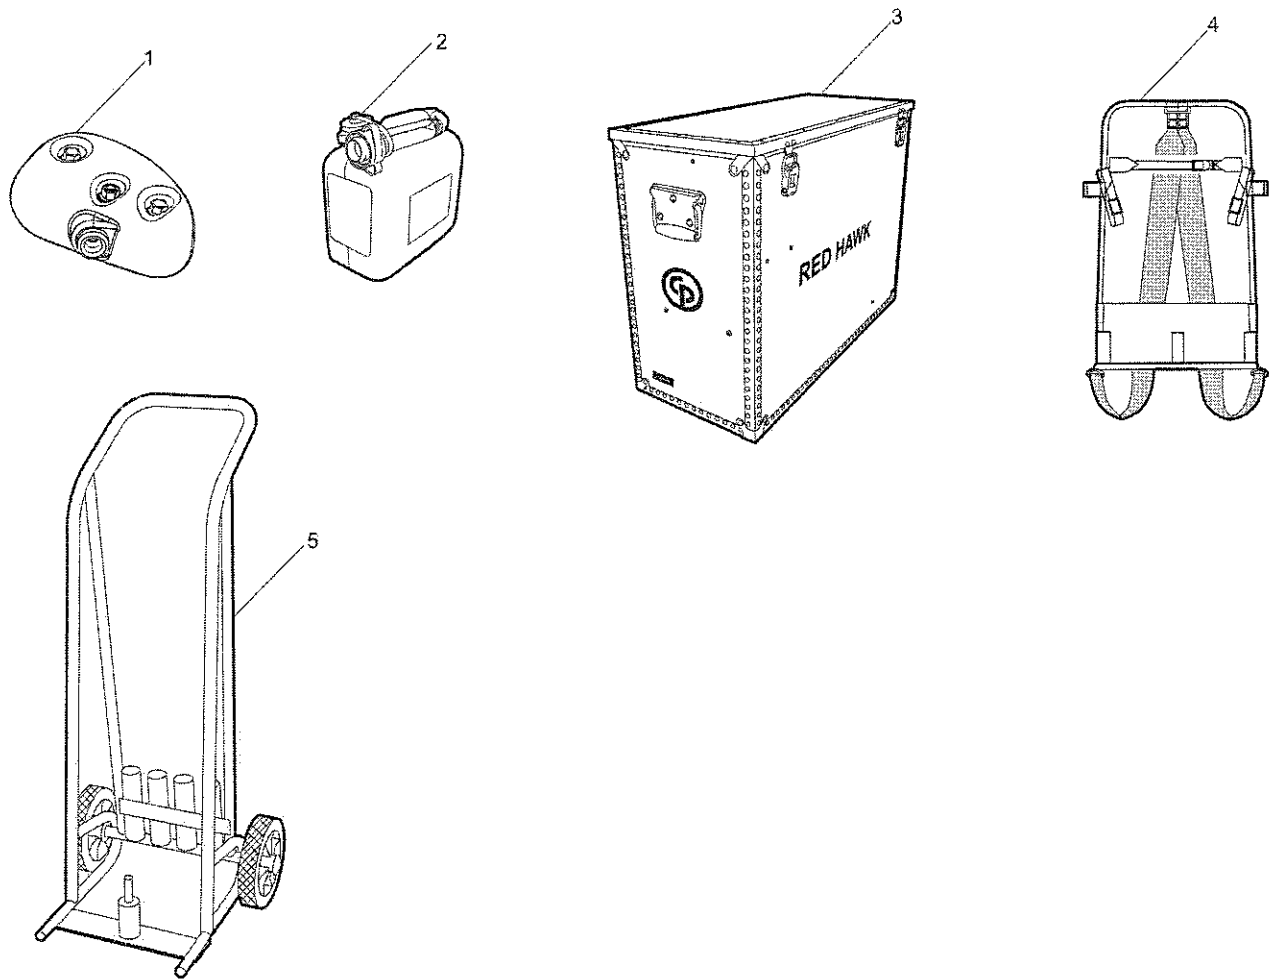


No.	Description	Remark	Quantity	Part number
1	Guide roller		1	9234 0009 38
2	Petrol can		1	9234 0008 97
3	Machine box		1	9234 0011 25
4	Carrying harness		1	9238 2814 10
5	Trolley		1	9234 0006 54










Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

Accessories

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

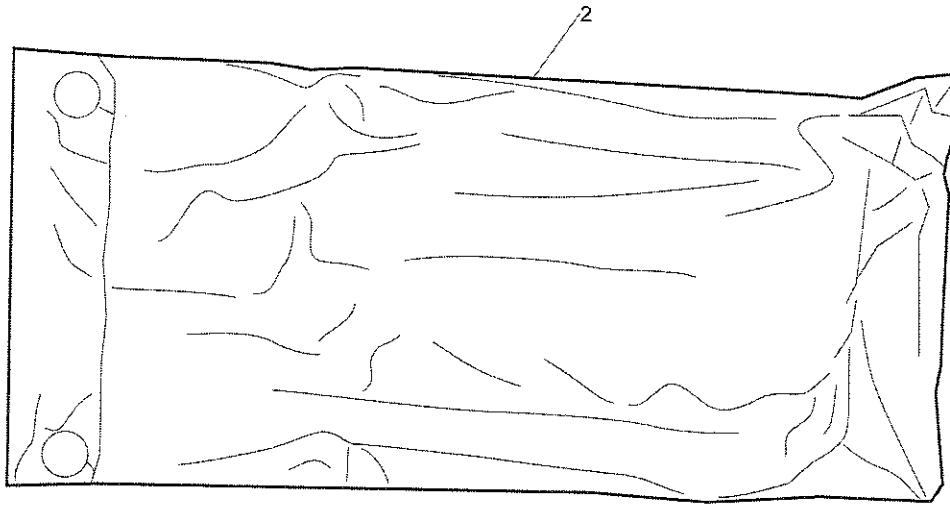

1								
2	3	4	5	6	7	8	9	

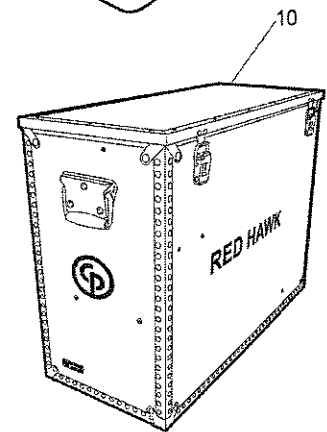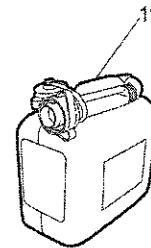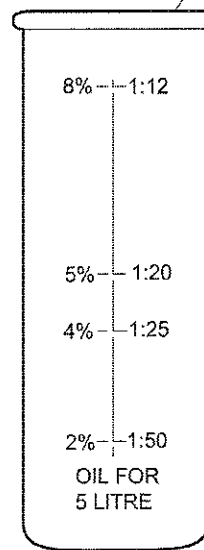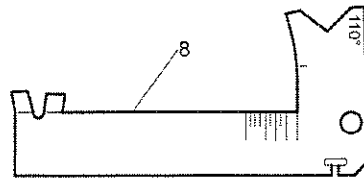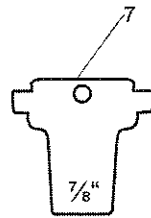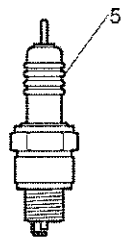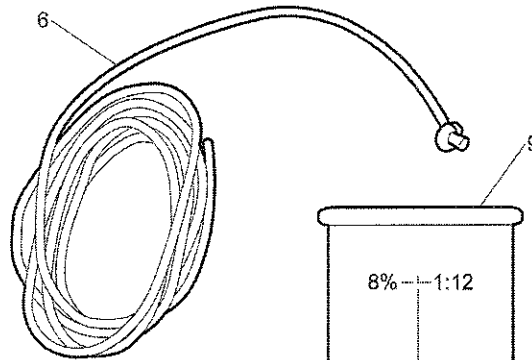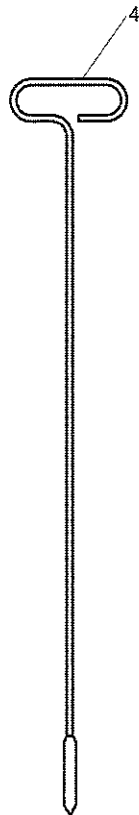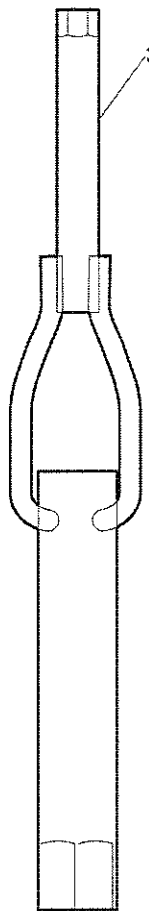

No.	Description	Remark	Quantity	Part number
1(2-9)	Tool bag kit		1	9234 0009 05
2	Tool bag		1	9238 2710 20
3	Socket wrench	Ø ¹ / ₂ mm Ø ⁹ / ₁₆ in.	1	9238 2714 00
4	Cleaning needle		1	9238 2701 00
5	Spark plug	Bosch WR7AC	1	9234 0009 04
6	Starter rope	4.0 x 1350 mm 0.2 x 53 in.	1	9232 2405 10
7	Chuck template	22 mm 0.9 in.	1	9238 2707 90
8	Grinding template		1	9238 2708 10
9	Oil measure		1	9238 2718 40
10	Machine box	"RED HAWK"	1	9234 0011 25
11	Petrol can		1	9234 0008 97

Motor oil

Description	Remark	Quantity	Part number
Two stroke oil (motor oil)	1 l (0.22 gal) Fully synthetic and biodegradable	1	9238 2743 50
Two stroke oil (motor oil)	1 l (0.22 gal) Fully synthetic and biodegradable	12	9234 0014 06

Kits

Service kit

Service kit

Part number 9234 0015 52

Description	Remark	Quantity	Part number
Rubber hose		1	9232 1401 31
Spark plug	M14 x 1.25 mm	1	9234 0009 04
O-ring	99.10 x 2.40 mm 3.90 x 0.09 in.	1	9232 1205 00
Piston ring, complete		1	9234 0015 16
Piston ring, complete		1	9234 0015 54
Starter rope		1	9232 2405 10
Gasket		1	9232 1214 20
Gasket		1	9232 1202 50
Flange nut	M6	4	9232 0207 50
Air filter		1	9234 0001 36

Gasket kit

Description	Remark	Quantity	Part number
Gasket kit		1	9234 0009 22
O-ring	15.3 x 2.4 mm 0.6 x 0.09 in.	2	9232 1201 80
O-ring	99.1 x 2.4 mm 3.9 x 0.09 in.	1	9232 1205 00
O-ring	27.1 x 1.6 mm 1.1 x 0.06 in.	1	9232 1208 20
O-ring	12.1 x 1.6 mm 0.5 x 0.06 in.	1	9232 1208 30
O-ring	17.1 x 1.6 mm 0.7 x 0.06 in.	1	9232 1208 40
O-ring		1	9232 1213 90
Gasket		1	9232 1214 20
Gasket		1	9232 1202 50
Gasket		1	9232 1202 60
Seal tube		1	9232 1401 30
Lock ring		2	9232 0503 50

Carburettor repair kit

Description	Remark	Quantity	Part number
Carburettor repair kit		1	9234 0009 12
Gasket		1	-
Gasket		1	-
Diaphragm		1	-
Diaphragm		1	-

Crowder Supply Co, Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

Crowder Supply Co. Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

Part number	Page	No.
0226 3300 19	7	13
0335 1117 00	7	20
175-5076,39-20	24	14
	24	14
3083 3228 00	23	1
	24	1
3083 3229 00	23	1
	24	1
3083 3230 00	23	2
	24	2
3083 3231 00	23	2
	24	2
3083 3232 00	23	3
	24	3
3083 3233 00	23	5
	24	5
3083 3234 00	23	6
	24	6
3083 3235 00	23	7
	24	7
3083 3236 00	23	8
	24	8
3083 3237 00	24	9
	24	9
3083 3238 00	24	11
	24	11
3083 3239 00	24	17
	25	17
3083 3240 00	24	21
	25	21
3083 3241 00	24	10
	24	10
3083 3252 10	24	16
	25	16
3083 4071 00	23	2
	24	2
3083 4072 00	23	3
	24	3
575-3108,11-17	24	13
	24	13
714-0434,05-02	24	12
	24	12
714-0833,05-02	24	12
	24	12
714-1232,05-02	24	12
	24	12
9232 0104 30	17	18
9232 0111 60	13	23
9232 0115 30	17	25
9232 0115 40	15	3
	15	15
9232 0125 20	13	5
9232 0116 40	11	13
	11	21
9232 0116 50	11	3
9232 0116 60	7	29
	13	4

Part number	Page	No.
9232 0116 70	13	6
	21	28
9232 0116 80	13	3
	21	27
9232 0118 80	19	12
9232 0206 00	13	24
9232 0206 10	13	22
9232 0207 50	7	28
	11	9
	13	29
	21	29
	30	
9232 0208 00	13	30
9232 0208 10	15	22
9232 0208 80	19	2
9232 0308 40	13	21
9232 0309 80	7	27
9232 0401 90	11	14
	11	22
9232 0402 60	9	17
9232 0402 80	9	13
9232 0406 30	7	26
9232 0501 10	13	16
9232 0501 20	17	16
9232 0503 50	9	21
	11	18
	30	
9232 0504 20	15	23
9232 0601 90	9	14
9232 0606 60	21	24
9232 0802 30	7	25
9232 0802 40	7	24
9232 0903 40	15	4
9232 0905 30	7	19
9232 1000 70	13	20
9232 1003 01	13	9
9232 1003 02	13	7
	15	5
9232 1003 80	17	10
9232 1200 70	13	8
	15	8
9232 1201 80	9	19
	30	
9232 1202 50	11	7
	30	
	30	
9232 1202 60	13	28
	15	18
	30	
9232 1202 90	17	27
9232 1205 00	9	8
	30	
	30	
9232 1207 90	9	12
9232 1208 20	30	

Part number	Page	No.
9232 1208 30	30	
9232 1208 40	30	
9232 1213 90	17	5
	30	
9232 1214 20	11	10
	30	
	30	
9232 1214 90	15	24
9232 1300 20	17	17
9232 1401 30	30	
9232 1401 31	11	16
	30	
9232 1401 40	11	28
9232 1408 20	11	24
9232 1605 50	9	15
9232 1605 60	9	20
9232 1605 72	9	16
9232 1802 11	11	26
9232 1802 40	11	5
9232 1808 70	11	4
9232 1808 80	11	6
9232 1900 40	11	15
	11	23
9232 1900 51	11	27
9232 1902 52	11	11
9232 1902 92	11	19
9232 2106 41	9	6
9232 2204 10	13	15
9232 2213 51	15	20
9232 2214 20	13	19
9232 2216 80	7	16
9232 2304 60	15	12
9232 2312 10	7	35
9232 2314 40	7	37
9232 2401 01	17	14
9232 2405 01	17	8
9232 2405 10	17	12
	29	6
	30	
9232 2406 10	17	26
9232 2406 40	17	6
9232 2407 71	17	7
9232 2609 01	15	14
9234 0000 45	17	13
9234 0000 63	19	3
9234 0001 11	21	3
9234 0001 36	19	1
	30	
9234 0001 37	19	8
9234 0001 80	19	10
9234 0002 18	21	7
	21	18
9234 0004 90	21	5

Crowder Supply Co., Inc. 8495 Roslyn St Commerce City, CO 80022 (303) 433-5144 FAX: (303) 433-3928 Toll Free: (888) 883-5144 www.crowdersupply.com

Part number	Page	No.
9234 0005 25	21	4
9234 0005 65	21	8
9234 0005 84	21	6
	21	17
9234 0006 54	26	5
9234 0007 61	21	25
9234 0007 65	19	13
9234 0007 79	7	31
9234 0007 81	7	30
9234 0007 98	13	27
9234 0008 04	19	14
9234 0008 05	21	1
9234 0008 07	21	15
9234 0008 42	17	1
9232 0008 95	21	12
9234 0008 50	21	26
9234 0008 52	17	3
9234 0008 53	15	1
9234 0008 71	15	10
9234 0008 87	19	11
9234 0008 89	17	22
9234 0008 95	21	9
9234 0008 97	26	2
	29	11
9234 0009 00	17	11
9234 0009 04	11	25
	15	19
	29	5
	30	
9234 0009 05	29	1
9234 0009 09	7	21
9234 0009 10	21	23
9234 0009 12	31	
9234 0009 14	7	22
9234 0009 17	19	15
9234 0009 21	19	16
9234 0009 22	30	
9234 0009 23	7	7
9234 0009 38	26	1
9234 0010 30	19	7
9234 0010 32	11	1
9234 0010 40	21	22
9234 0011 08	7	15
9234 0011 12	7	10
9234 0011 15	7	32
9234 0011 19	7	4
9234 0011 25	26	3
	29	10
9234 0011 28	7	33
9234 0011 30	7	6
9234 0011 32	9	11
9234 0011 34	9	9

Part number	Page	No.
9234 0014 03	19	17
9234 0014 06	29	
9234 0014 10	7	12
9234 0014 11	13	11
9234 0014 15	9	4
9234 0014 16	9	5
9234 0014 18	7	34
9234 0014 21	19	4
9234 0014 27	7	36
9234 0014 28	17	24
9234 0014 30	17	19
9234 0015 41	11	8
9234 0014 78	21	19
9234 0014 90	13	17
9234 0014 91	19	6
9234 0014 99	7	8
9234 0015 01	7	9
9234 0015 02	7	17
9234 0015 04	7	5
9234 0015 16	9	3
	30	
9234 0015 17	9	1
9234 0015 19	17	23
9234 0015 25	7	1
9234 0015 26	7	3
9234 0015 27	7	14
9234 0015 51	13	1
9234 0015 54	13	13
	30	
9234 0015 55	15	25
9238 2701 00	29	4
9238 2707 90	29	7
9238 2708 10	29	8
9238 2710 20	29	2
9238 2714 00	29	3
9238 2718 40	29	9
9238 2743 50	29	
9238 2814 10	26	4
9245 2812 90	23	4
	24	4
9245 2813 51	24	15
	24	15
9245 2813 81	24	15
	24	15
9245 2817 90	24	20
	25	20
9245 2822 31	24	19
	25	19
9245 2822 40	24	9
	24	9
9245 2822 80	24	18
	25	18

Part number	Page	No.
9245 2823 30	24	9
	24	9